


## Konsta-Stop or Timer operation setting

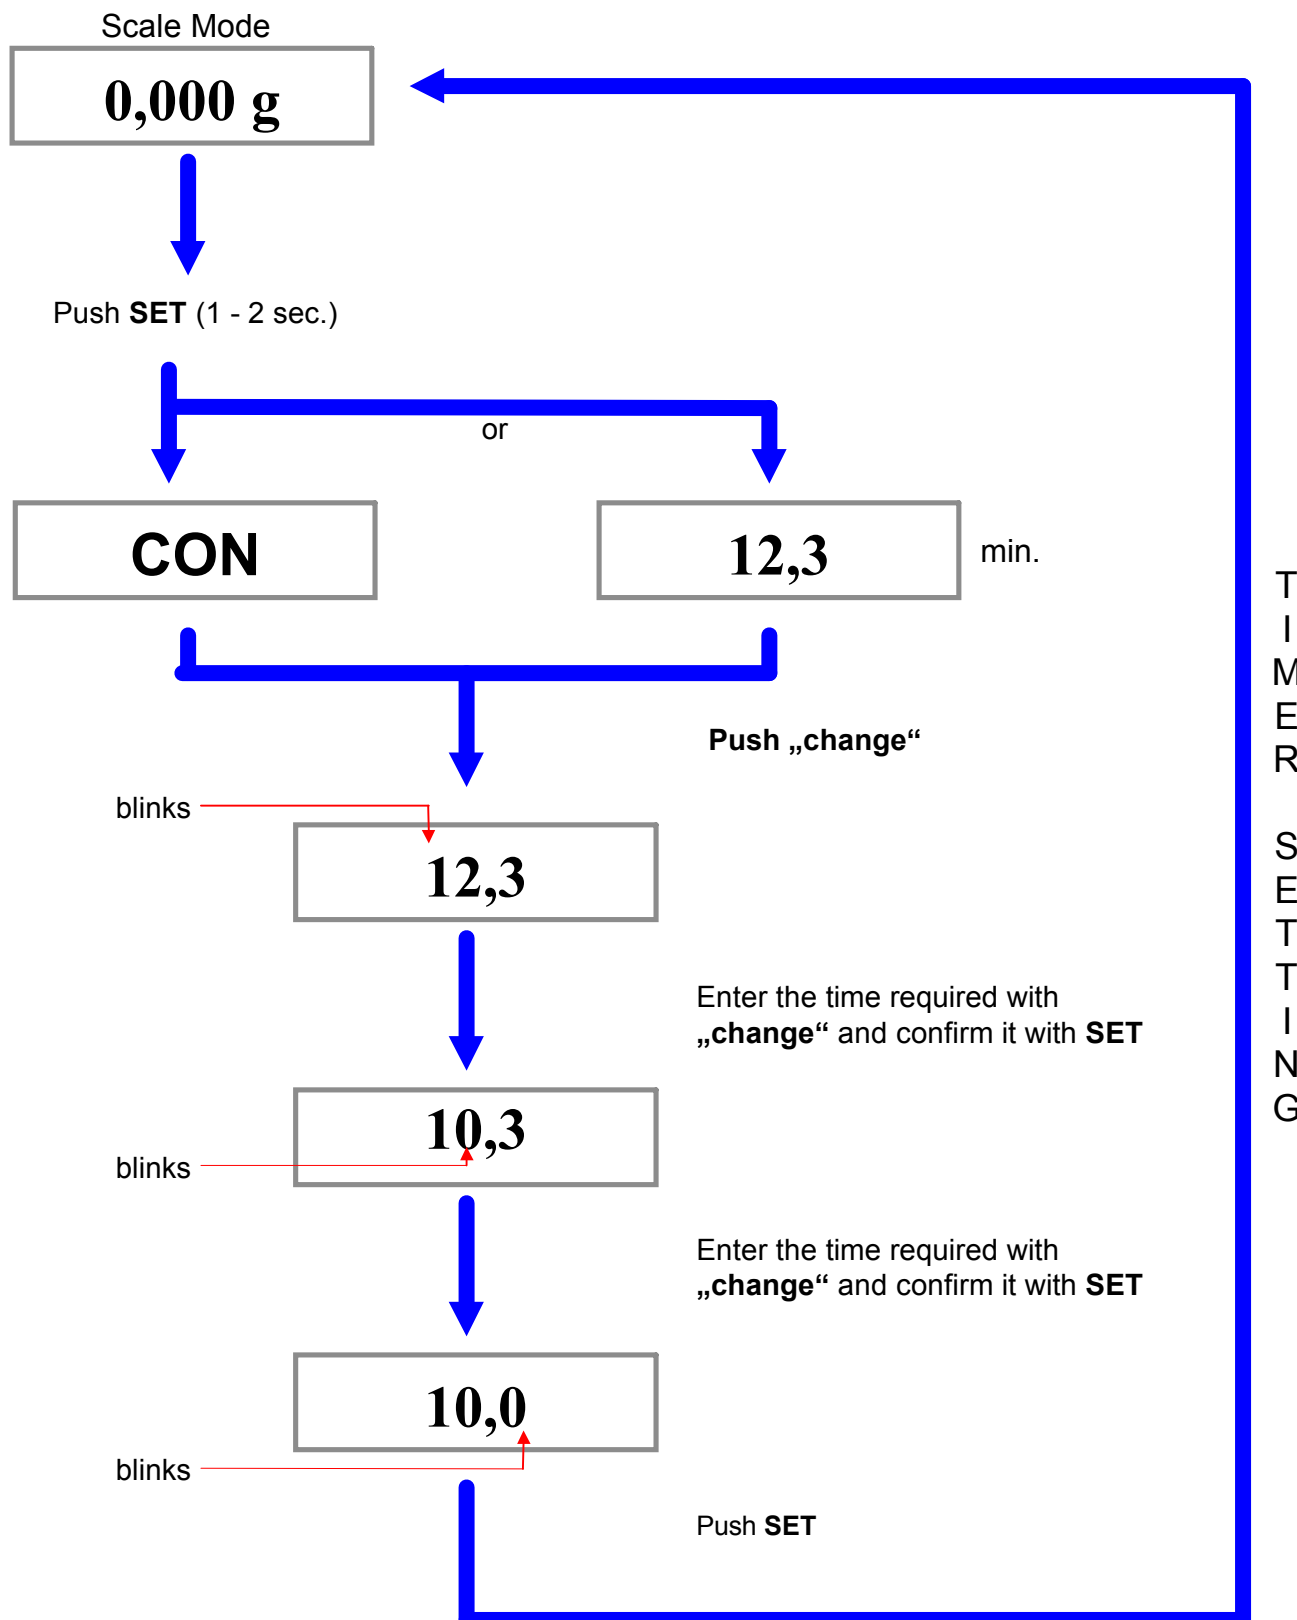

*For Konsta-Stop-automatic the Timer has to be set to 00,0 !*